


SINGLE USE

PALLET TRUCK STANDARD

Size: ± 5×5 m / 16.4 × 16.4 ft. | Handled by: 

- 1** Place the fire blanket on the ground in front of- or behind the pallet truck and roll it out.



- 2** Two people should grab each their handle and safely pull the fire blanket over the pallet truck in one continuous movement.



- 3** Make sure the fire blanket is tight all the way to the ground. Wait at least 20 minutes before you remove the fire blanket.



i **ALWAYS CALL THE FIRE DEPARTMENT!**

Fire in electric pallet trucks: If you can hear a strong fuzzy sound about every 2-15 seconds, you have a thermal runaway. Fire stops when the sound stops. The battery might reignite at any time, therefore leave the sail on until the battery can be disassembled.



Instruction videos



BRIDGEHILL®

WE SIMPLY BLOCK FIRE

Bridgehill.com